


MARATHON PRODUCTS

Data Logger Software

Get the most from your data loggers


Marathon's Data Analysis Software (MDAS) allows you to view up to 16 multiple traces at one time, enables you to transfer the information recorded in the logger to your computer, and to view, print and generate a report of the measurement data. The graphic representations include rotating 3D views, unlimited zooms, view temperature data points on the graph, view the total elapsed time or the exact time when it was recorded. The graph and all data points (date, time and temperature) can be printed, as well as the ability to add a Note to the file for including information pertinent to that graphic trace. Users have the ability to view the numeric data within a screen window, calculate the Mean Kinetic Temperature of the recording as well as export data in a CSV format. A summary report showing the Start and Stop Time, High, Low, Median and Average temperatures as well as the Alarm information is also displayed. The data from the logger is downloaded to your PC via our proprietary RS232 serial interface cable or USB interface. MDAS offers language support for English, French, German, Portuguese and Spanish. A separate installation program for Chinese and Japanese is also available on the CD-ROM with this version of the software. The software has been designed for the Microsoft operating system platforms and is compatible with Windows 98, NT, 2000, XP, Vista and Windows 7.

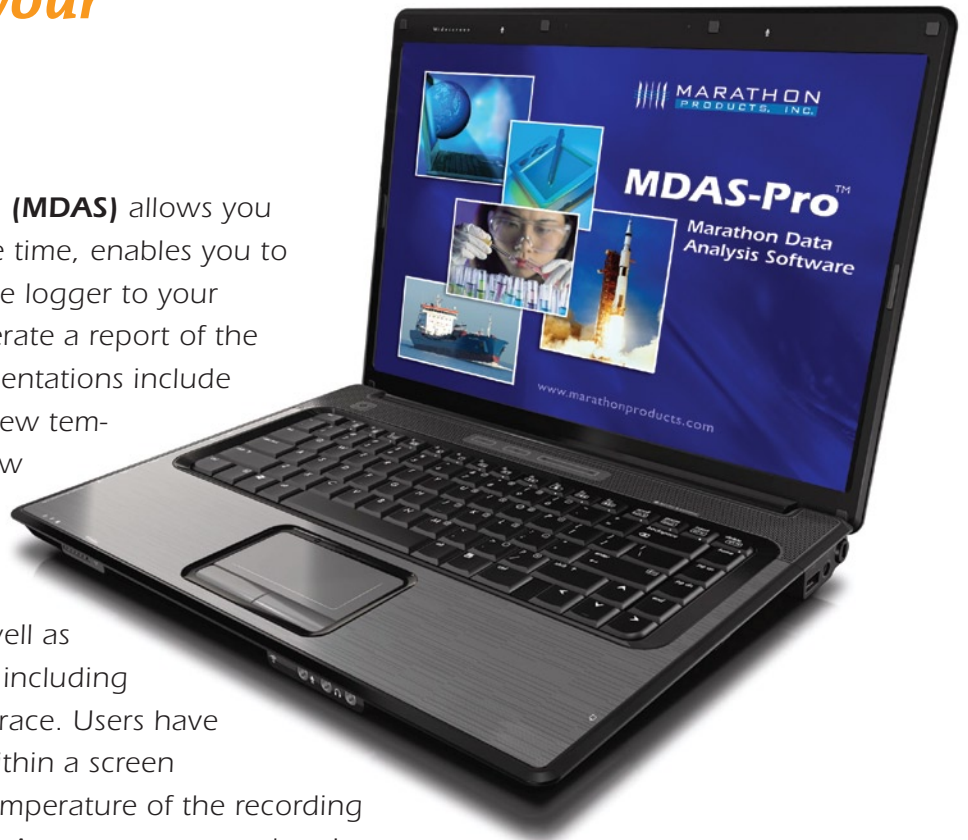


MARATHON
 **PRODUCTS, INC.**

Don't ship without us!®


Software Highlights:

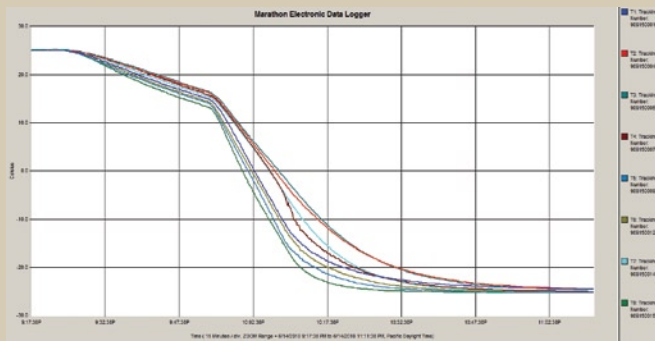

MDAS-Pro Temperature Plots

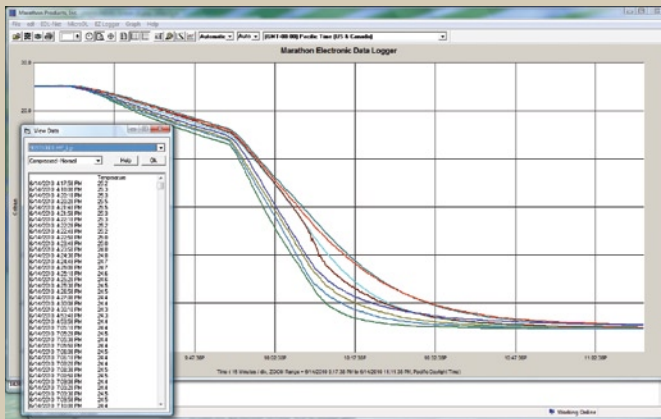

MDAS-Pro Temperature Plots with Recorded Data

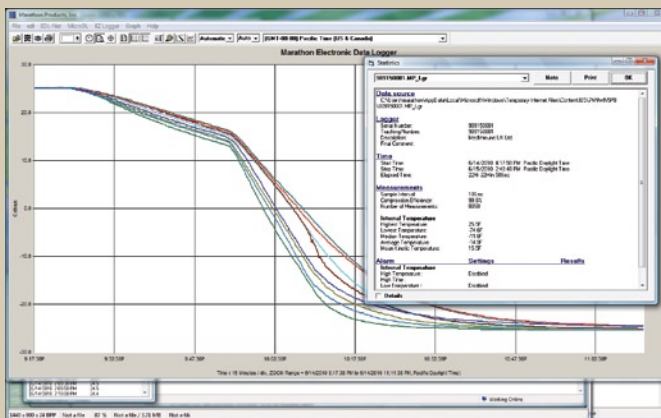

MDAS-Pro Temperature Plots with Logger General Information

edi-RF Software

The edi-RF software has all of the above features of the MDAS-PRO as well as the following special features:

- Local access or remote ethernet access versions
- Remote programming of logger
- Remote Start and Stop
- Alarm notification appears on-screen and/or via a sound alert
- Alarm messages can also be sent via email, SMS and by telephone
- Manual or automatic alarm reset
- Real time data display
- Logger can be identified with the station ID and managed individually
- Control an unlimited number of loggers at a time
- Preprogrammed automatic read, erase and export
- Mean Kinetic Temperature calculation for controlled room temperature profiling
- The data from the base station is downloaded to your PC through a USB cable (Local Access) or over the LAN (Ethernet Access).

c\temp Software

Our c\temp software is Read Only and it is not for programming. This is used to read data collected from our c\temp single-use data loggers. It has all the features of the MDAS-PRO, but excludes the ability to program the devices.

For more information about Marathon Products' software please contact Marathon Products.

Please call 1-510-562-6450 x607
for more information or to place an order.

www.marathonproducts.com

627 McCormick St., San Leandro, CA 94577 ▪ jperry@marathonproducts.com