

MARATHON PRODUCTS

c\temp-USB -80 CTM Coin Cell Data Logger

*The USB Single-use that
meets IATA regulations.*

Our new compact c\temp-USB -80 C dry ice data logger now comes with USB built-in so that downloading data is fast! Connect with a mini USB cable found anywhere and obtain real time and or stored -80 C readings immediately. Our time-tested dry ice loggers, used by Fortune 500 Companies globally, for dry ice shipments NOW comes with USB connectivity. Now connect immediately to your PC with this new USB enablement without having to worry about bringing the data logger to room temperatures. You asked and we have complied! This new product is IP66 rated for moisture prevention commonly associated with dry ice shipments.

Designed for measuring temperatures during the transportation of biologics, vaccines, chemicals, pharmaceuticals and ultra frozen products—this new product will surely satisfy your critical dry ice shipments.

The internal firmware provides the following features: time mechanism, start time, intervals, end descriptions details for special instructions, alarm values, recording status, measurement data, firmware version, serial numbers, model type and after the fact report generation options.

MDAS-Pro Software includes language conversion on the fly from English to: Spanish, German, Portuguese, Japanese, and French.

To Start the recorder, simply press the START Button!



Temperature Range

- -80°C to +30°C
(-113°F to +86°F)

Temperature Accuracy

- $\pm 0.2^{\circ}\text{C}$ ($\pm 0.36^{\circ}\text{F}$)
at 0° to 10°C
(32 to 50°F);
 $\pm 2.0^{\circ}\text{C}$ ($\pm 3.6^{\circ}\text{F}$)
at extremes

Measurement Intervals

- Pre-programmed from
2 seconds.

EEPROM Memory



- 8k

MARATHON
PRODUCTS, INC.



Don't ship without us!®

MDAS-Pro Software Highlights: Easy-to-use software provides clear graphs. Report Summary & Statistics File Manager, Note Attachment, Zoom, Elapsed Time or Date/-Time View, Recorded View, Celsius, Fahrenheit or Kelvin, Display 3D View option. Data can be exported to other Windows programs such as spreadsheet, word-processing or database. Language support for Chinese, English, French, German, Japanese, and Portuguese. Available for Windows XP, Vista, 7, 8 and 10. An Enterprise Software version and 21CFR Part 11 Compliant Software are also available.

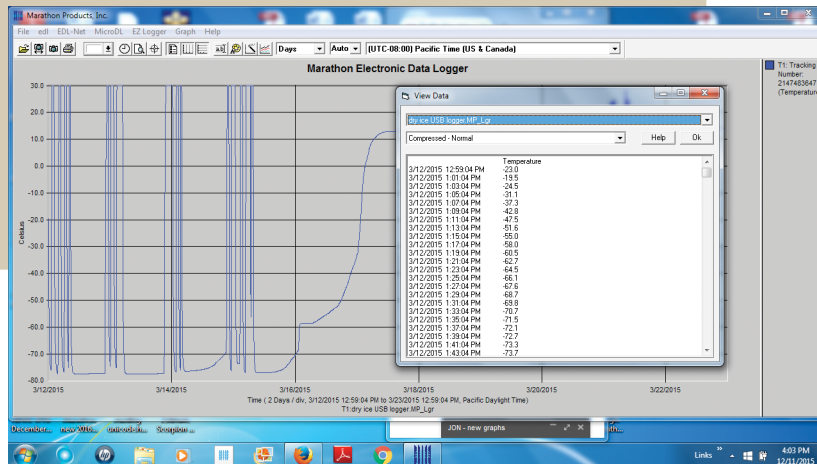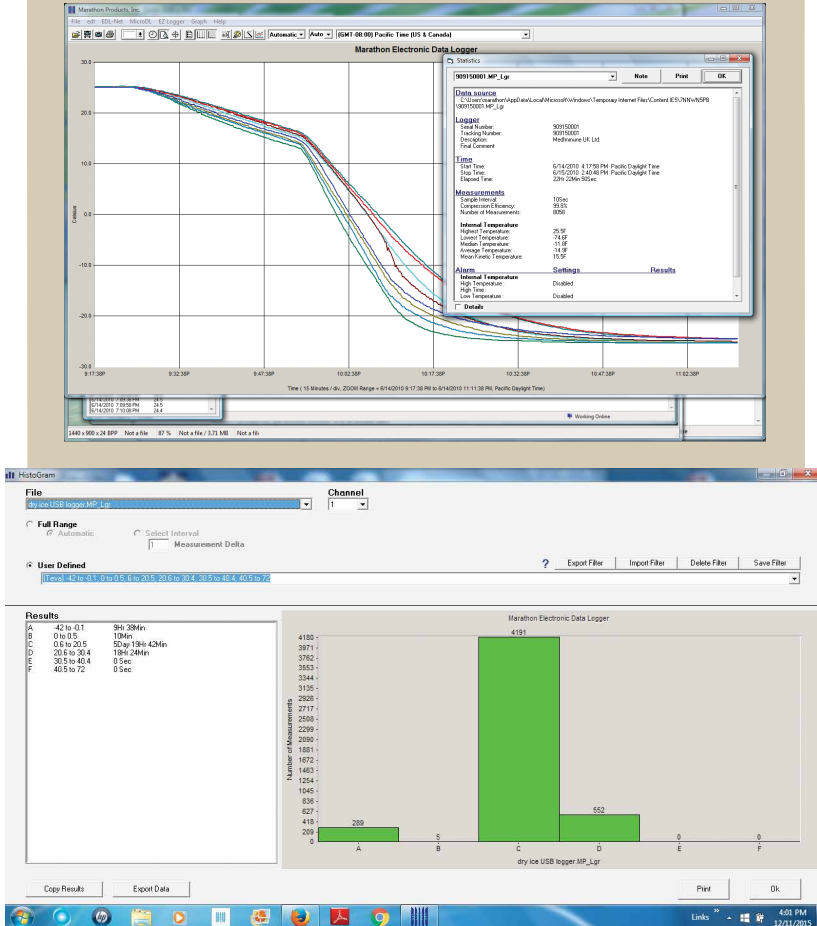

Temp-USB -80 C Coin Cell SKU #7044

Memory EEPROM, Storage:	8k (approx. 8,000 measurements)
Temperature Range:	-80°C to +30°C / -113°F to +86°F
Temperature Accuracy:	±0.2°C at 0° to 10°C, ±2.0°C at extremes ±0.36°C at 32° to 50°C, ±3.6°C at extremes
Temperature Resolution	0.5°C (0.9°F)
Measurement Intervals:	Programmable from 2 seconds per reading.
Temperature Sensor:	Precision NTC thermistor
Indicators:	Start/Stop and Alarm
High and low alarm limits:	LED indicator alarm set by temperature and time
Computer Interface:	USB Mini B port
Internal Firmware Provides:	Times, Start time, Interval, User description, Alarm values, Recording status, Measurement data, Firmware version, Serial number, Model type
Power Source:	coin cell CR2450 - single 3.6 V lithium with 1 year operating life and 3 year shelf life. 0.13 g of lithium. Dia 3.2cm, Height 0.65cm IATA - FAA Compliant approved battery.
Size:	9 cm(l) x 5 cm(w) x 2.8 cm (h) / 3.5 in.(l) x 1.96 in (w) x 1.1 in.(h)
Weight:	85 g (3.0 oz.)
CE Certified	Yes
Warranty	3 Months
FAA Compliance	RTCA/D-160 Ver. D, Section 21, Category H.
Accessories:	NIST Certificate = no charge Optional NIST Certificate + 1, 2 or 3 Point Calibration Available

**Please call
1-510-562-6450**
for more information or to
place an order.

www.marathonproducts.com

627 McCormick St., San Leandro, CA 94577 ■ sales@marathonproducts.com
Specifications subject to change without prior notice.