

MaxiLog-HX™

For All Specialty Pharmacies and Wholesalers of Pharmaceutical Drugs to Retailers and End Users.

Our MaxiLog-HX data logger comes in a compact size for all of your drugs, injectables, specialty creams, birth control, and diabetic drugs needing 24/7 quality assurance compliance.


Using this micro edge alert monitor, retail specialty pharmacies can send temperature sensitive prescription medications directly to end users. By noting the status of the ON and Alarm LEDs, patients will know whether the alarm has been triggered and can easily ascertain whether their medications stayed temperature compliant. This way, the end user can determine whether it is SAFE to use the delivered prescriptions.

If the Alarm LED is “flashing red,” the product has exceeded either high or low temperature specifications and the product should not be used. The pharmacy/shipper should be immediately contacted and informed that the drugs were not temperature compliant during delivery.

Setting the high and low temperature limits, recording intervals, and downloading data is easy with Marathon’s MaxiThermal2, software. Just plug the reader station into the USB port of a computer to read and program.



- Multi-Use
- Pharmaceutical
- Shipping
- LED Alarm
- Easy to Use

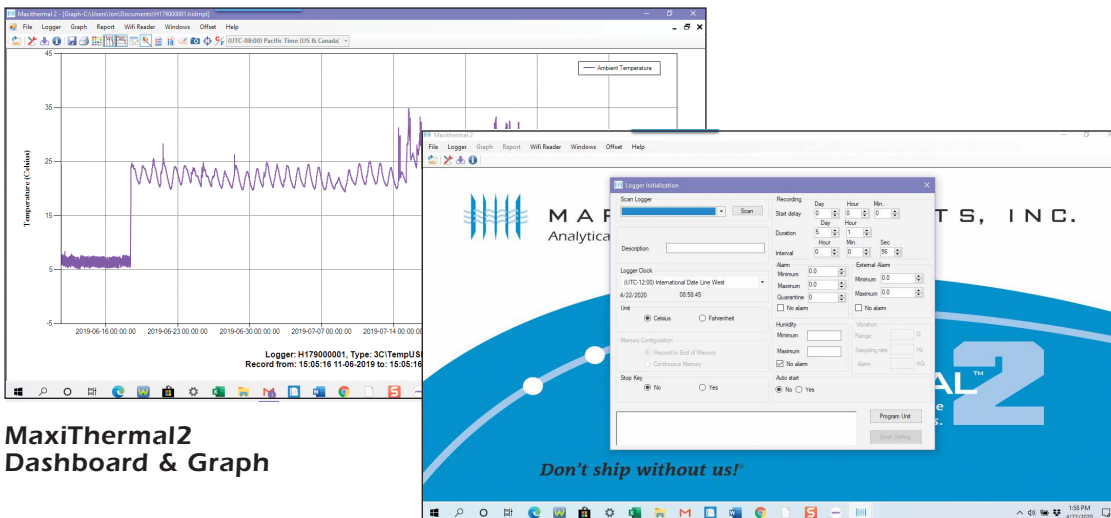

MaxiThermal2 Dashboard & Graph




MARATHON PRODUCTS, INC.

Don't ship without us!®

EASY USE INSTRUCTIONS



01 Press the START button to begin recording.

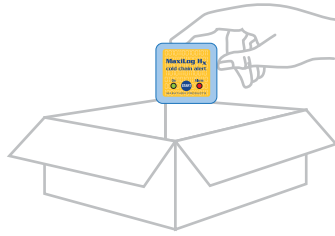

02 Add logger to your package.



03 Check LED status at destination.



04 Connect logger to USB reader station at final destination to download data and generate PDF report.

SPECIFICATIONS: MaxiLog-HX SKU #7049

Memory EEPROM, Storage:	2k Temperature		
Temperature Range:	-29° C to +72° C / -20° F to +160° F		
Temperature Accuracy:	±0.5° C from 0° C to 10° C, ±1° C from 10° C to 70° C, ±2° C at extremes ±0.9° F from 32° F to 50° F, ±1.8° F from 50° F to 158° F, ±3.6° F at extremes		
Temperature resolution	0.1° C / 0.18° F		
Temperature Sensor:	Digital sensor		
Measurement Intervals:	User programmable from 2 seconds to hours.		
High and low alarm limits:	LED indicators		
Computer Interface:	USB Standard A for Reader Station.		
Internal Firmware Provides:	Internal Clock, Start time, Interval, User description, Alarm values, Recording status, Measurement data, Firmware version, Serial number, Model type.		
Power Source:	CR2016 Battery		
Battery Life:	1 year for 1-day recording duration or longer		
Warranty:	12 months		
Size	Length	Width	Depth
Maxilog-Hx	3 cm (1.18 in.)	3 cm (1.18 in.)	0.85 cm (0.34 in.)
Size Reader Station	4.7 cm (1.85 in.)	3.4 cm (1.34 in.)	2.67 cm (1.05 in.)
Weight MaxiLog-Hx:	7 grams / 0.25oz		
Options:	MaxiThermal2 software		



USB Reader Station
SKU#9052

1-510-562-6450 ■ www.marathonproducts.com

14500 Doolittle Drive, San Leandro, CA 94577 ■ jnakagawa@marathonproducts.com

Specifications subject to change without prior notice.

rev. 06252220